

5. Starting and stopping

See chapter 4.3 and 4.4 in the Operator's Manual

Starting

- 1. Open the cover by pressing the STOP button.
- 2. Set the main switch to position 1. When you do this for the first time, a start up sequence starts where you select a four digit PIN code among other things.
- 3. Press the START button.
- 4. Close the cover.



Stopping

Press the STOP button.

6. Adjust the robotic lawnmower to suit your garden

See chapter 6.3, 6.4 and 6.6 in the Operator's Manual

Here you will find some tips on important settings for your robotic lawnmower. All settings for your robotic lawnmower are made via the menu functions.

Adjust the mower to suit the size of your lawn

The mowing results depend on mowing time. Adjust the mowing time to suit your garden using the *Timer* function. If the mower cuts too often, the lawn will appear trampled down. If the mower cuts too seldom, the lawn will not be properly mown.

Test run the mower through narrow passages

Narrow passages in the garden make it difficult for the mower to find the charging station. Use the *Test out* function (Calibrate guide function for the GARDENA R40Li) to test that the mower can travel through the narrowest passage

- 1. Place the mower in the charging station.
- 2. Select Test Out (Calibrate quide for GARDENA R40Li) in the robotic lawnmower's menu and press OK. Then press the Start button and close the cover.
- 3. Check that the mower follows the guide wire through the passage.
- a. If the mower travels through the passage, the test is complete.
- If the robotic lawnmower does not get through the passage: Check that the guide wire has been laid acb. cording to the instructions in chapter 3.6 in the Operator's Manual.

It is also possible to adjust the guide width for the GARDENA R70Li. See chapter 6.4 in the Operator's Manual.


STREET, (3 0

WWW.GARDENA.COM



Timer

You decide what times during the day and days of the week the mower is to work. The robotic lawnmower mows about 45 m² per hour and day (30 m² for the GARDENA R40Li). For example; if your garden consists of 360 m² of grass, the robotic lawnmower should work on average 8 hours per day (12 hours for the GARDENA R40Li).

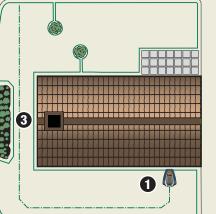

GARDENA

QUICK GUIDE GARDENA ROBOTIC LAWNMOWER











115 49 66-26


GARDENA

GETTING STARTED WITH THE GARDENA ROBOTIC LAWNMOWER

1. Placement of and connecting the charging station

See chapter 3.2 in the Operator's Manual

- 1. Place the charging station at a central position in the work area, with a lot of open space in front of the charging station and on a relatively horizontal surface.
- 2. Connect the transformer's low voltage cable to the charging station and the transformer.
- 3. Connect the transformer to a 230 V wall socket.

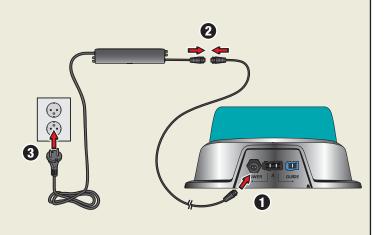

3. Connecting the boundary wire

See chapter 3.5 in the Operator's Manual


- 1. Open the connector and lay the wire ends in the recesses on each connector.
- 2. Press the connectors together using a pair of pliers.
- 3. Cut off any surplus boundary wire. Cut 1 to 2 cm above the connectors.

4. Press the connectors onto the contact pins, marked A, on the charging station. It is important that the right-hand wire is connected to the right-hand contact pin, and the left-hand wire to the left-hand pin.

2. Charging the battery and placement of the boundary wire

See chapter 3.3 and 3.4 in the Operator's Manual

- 1. Place the robotic lawnmower in the charging station to charge the battery while the boundary wire is laid. Set the main switch to position 1.
- 2. Run the boundary wire ensuring it forms a loop around the work area.
- 3. Make an eyelet at the point where the guide wire will be connected later (see point 4.5).

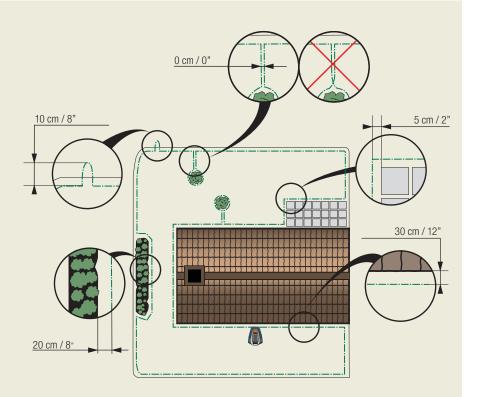

4. Placement of and connecting the guide wire

See chapter 3.6 in the Operator's Manual

- 1. Run the guide wire through the slot at the bottom of the charging station.
- 2. Fit the connector to the guide wire in the same way as for the boundary wire, according to the instructions above.
- 3. Fasten the connector to the contact pin marked Guide on the charging station.
- 4. Lay the guide wire at least 2 metres straight out from the front edge of the charging station.
- 5. Run the guide wire to the point on the boundary loop the connection will be made. Avoid laying the wire at tight angles.
- 6. Cut the boundary wire with a wire cutters at the centre of the eyelet that was made in point 2.3.
- 7. Connect the guide wire to the boundary wire using the accompanying couplers. Press the couplers completely together with a pair of pliers.

- 1. Main switch
- 2. STOP button
- 3. LED for function check of the boundary and guide wires
- 4. Cutting height indication
- 5. Display 6. Keypad












Charging station


Transformer


Low voltage cable

couplers



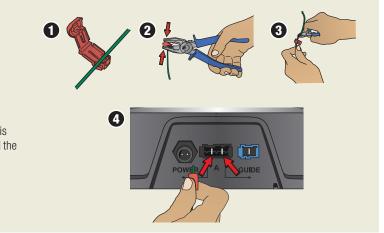

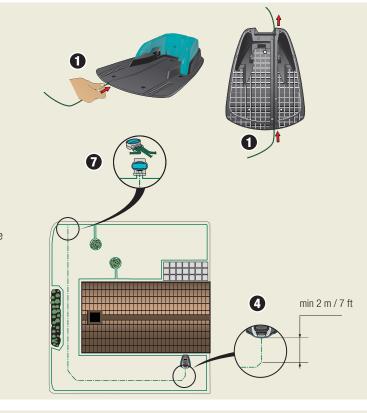

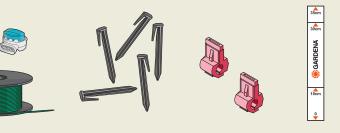

Boundary wire and

Staples

Connectors

Measurement gauge