

18V EasiClear 100









PNC 9706383-01 (Kit)

PNC 9706382-01 (Without battery and charger)

**EN Operator's manual**  
Battery Blower

---



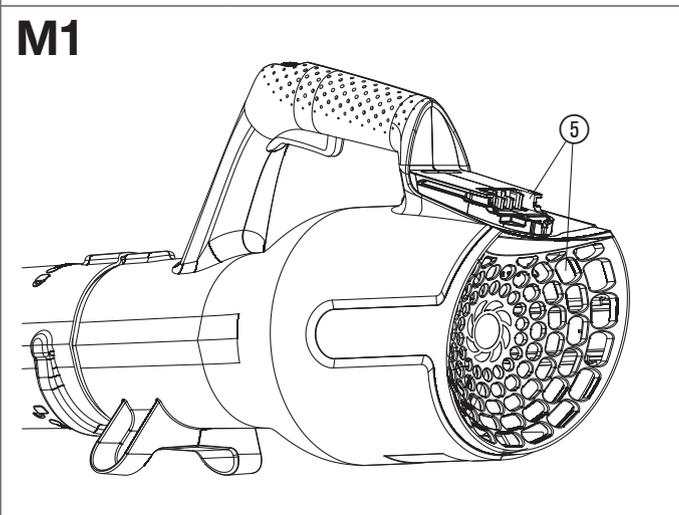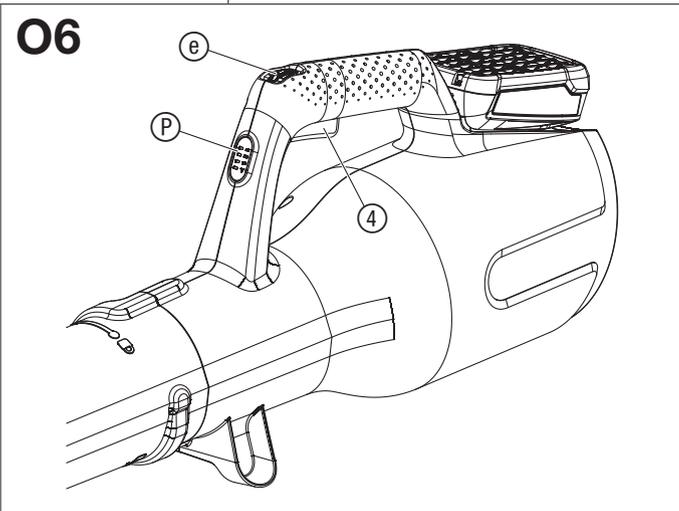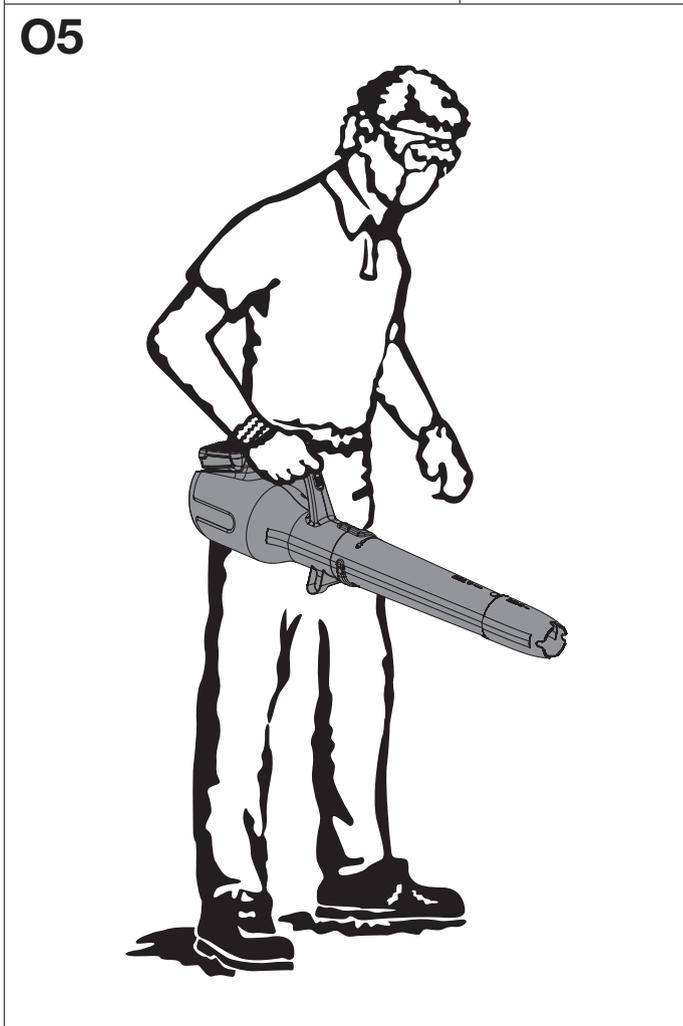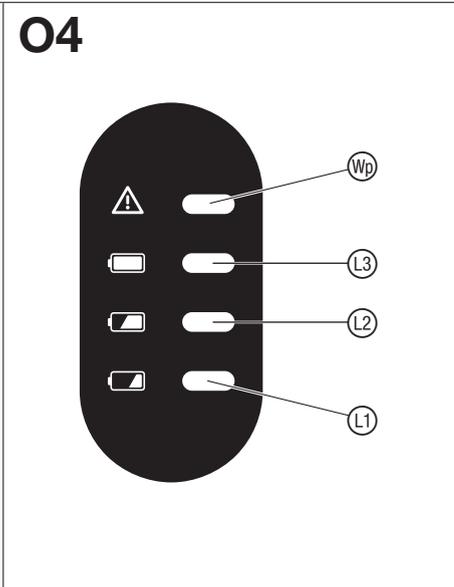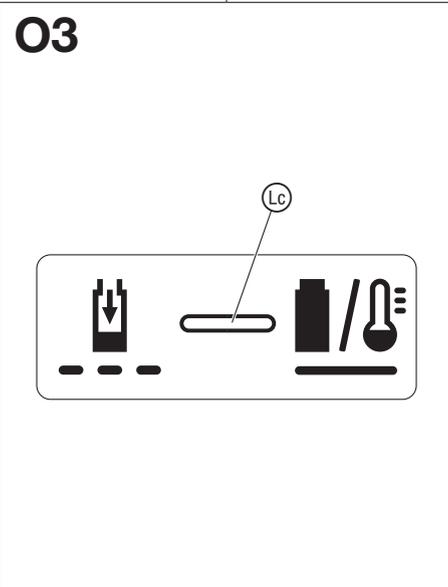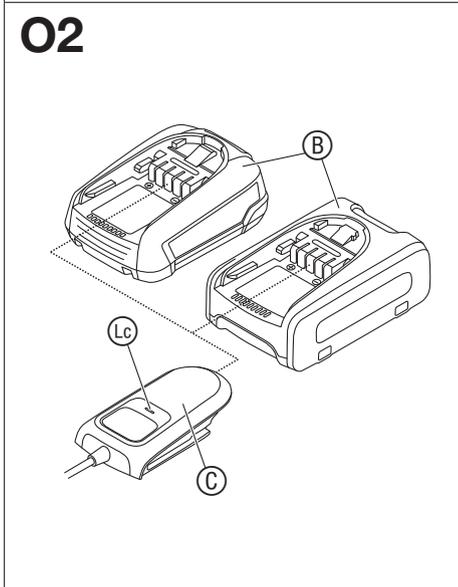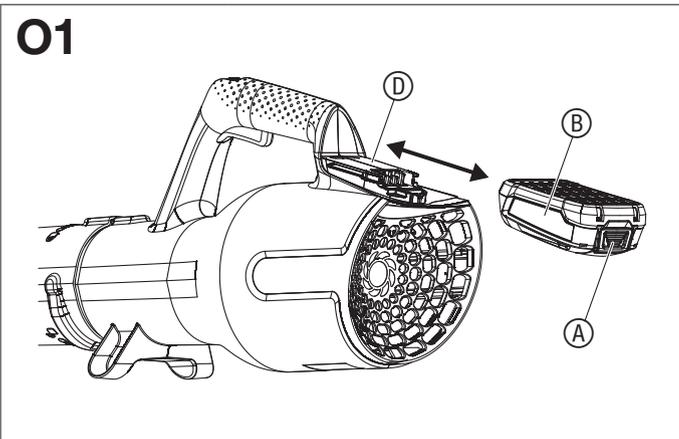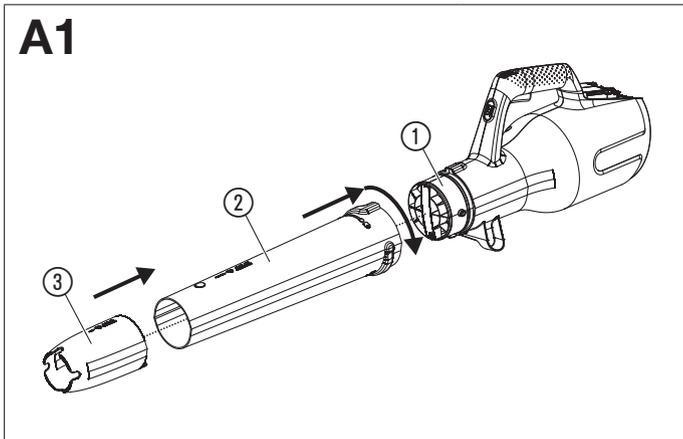

## EN FLYMO Battery Blower 18V EasiClear 100

1. SAFETY	4
2. ASSEMBLY	6
3. OPERATION	6
4. MAINTENANCE	6
5. STORAGE	6
6. TROUBLESHOOTING	7
7. TECHNICAL DATA	7
8. ACCESSORIES	7
9. SERVICE/WARRANTY	8

### Original instructions.



This product is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge. Children should be supervised to ensure that they do not play with the product. Cleaning and user maintenance must not be performed by children without supervision. The use of this product by young people under the age of 16 is not recommended.

### Intended use:

The **FLYMO Blower** is intended to blow dirt particles or grass cuttings away from paths, driveways, courtyards, etc., to blow grass cuttings, straw or leaves to create piles, or to remove dirt particles from corners, joints or gaps between tiles or bricks.

The product is not intended for long term use.



### DANGER! Risk of explosion!

→ Do not use the product in enclosed rooms or to blow flour, sand, wood dust, etc.

## 1. SAFETY

### IMPORTANT!

Read the operator's manual carefully before use and keep for future reference.

#### Symbols on the product:



Read operator's manual.



Keep bystanders away.



Wear eye and ear protection.



Switch off:  
Remove the Battery before cleaning or maintenance.



Do not expose to rain.



For the charger:  
Remove plug from the mains immediately if the cable is damaged or cut.

#### General safety warnings

#### Electrical safety for the charger



**DANGER! Electric shock!**

Risk of injury due to electric shock.

→ The product must be supplied through a residual current device (RCD) having a rated residual operating current not exceeding 30 mA.

### Safe operating practices

#### 1 Training

- Read the instructions carefully. Be familiar with the controls and the correct use of the machine.
- Never allow children or people unfamiliar with these instructions to use the machine. Local regulations can restrict the age of the operator.
- Keep in mind, that the operator or user is responsible for accidents or hazards occurring to other people or their property.

#### 2 Preparation

- Obtain ear protection and safety glasses. Wear them at all times while operating the machine.
- While operating the machine always wear substantial footwear and long trousers. Do not operate the machine when barefoot or wearing open sandals. Avoid wearing clothing that is loose fitting or that has hanging cords or ties.
- Do not wear loose clothing or jewellery that can be drawn into the air inlet. Keep long hair away from the air inlets.
- Operate the machine in a recommended position and only on a firm, level surface.
- Do not operate the machine on a paved or gravel surface where ejected material could cause injury.
- Before using, always visually inspect to see, that the shredding means, shredding means bolts and other fasteners are secure, the housing is undamaged and that guards and screens are in place. Replace worn or damaged components in sets to preserve balance. Replace damaged or unreadable labels.
- Before use, check the supply and extension cord for signs of damage or aging. If the cord becomes damaged during use, disconnect the cord from the supply immediately.  
DO NOT TOUCH THE CORD BEFORE DISCONNECTING THE SUPPLY.  
Do not use the machine if the cord is damaged or worn.
- Never operate the machine while people, especially children, or pets are nearby.

#### 3 Operation

- Before starting the machine, make certain that the feeding chamber is empty.
- Keep your face and body away from the feed intake opening.
- Do not allow hands or any other part of the body or clothing inside the feeding chamber, discharge chute, or near any moving part.
- Keep proper balance and footing at all times. Do not overreach. Never stand at a higher level than the base of the machine when feeding material into it.
- Always stand clear of the discharge zone when operating this machine.
- When feeding material into the machine be extremely careful that pieces of metal, rocks, bottles, cans or other foreign objects are not included.
- If the cutting mechanism strikes any foreign objects or if the machine should start making any unusual noise or vibration, immediately shut off the power source and allow the machine to stop. Disconnect the machine from the supply and take the following steps before restarting and operating the machine:
  - inspect for damage;
  - replace or repair any damaged parts;
  - check for and tighten any loose parts.
- Do not allow processed material to build up in the discharge zone; this may prevent proper discharge and can result in kickback of material through the intake opening.
- If the machine becomes clogged, shut-off the power source and disconnect the machine from supply before cleaning debris.
- Never operate the machine with defective guards or shields, or without safety devices.
- Keep the power source clean of debris and other accumulations to prevent damage to the power source or possible fire.
- Do not transport this machine while the power source is running.
- Stop the machine and remove plug from the socket. Make sure that all moving parts have come to a complete stop:
  - whenever you leave the machine,
  - before clearing blockages or unclogging chute,
  - before checking, cleaning or working on the machine.
- Do not tilt the machine while the power source is running.

#### 4 Maintenance and storage

- When the machine is stopped for servicing, inspection, storage, or to change an accessory, shut off the power source, disconnect the machine from the supply and make sure that all moving parts are come to a complete stop. Allow the machine to cool before making any inspections, adjustments, etc. Maintain the machine with care and keep it clean.
- Store the machine in a dry place out of the reach of children.
- Always allow the machine to cool before storing.
- When servicing the shredding means be aware that, even though the power source is switched off due to the interlock feature of the guard, the shredding means can still be moved.
- Replace worn or damaged parts for safety. Use only genuine replacement parts and accessories.
- Never attempt to override the interlocked feature of the guard.

#### 5 Additional safety instructions for units with bagging attachments

Switch-off the machine before attaching or removing the bag.

## Safety warnings for batteries and chargers



### Read all the safety and general instructions.

Failure to observe the safety and general instructions may result in electric shock, fire and/or serious injury.

### Store these instructions in a safe place.

Only use the charger if you can fully evaluate all functions and carry them out without restrictions, or if you have received corresponding instructions.

#### → Supervise children during use, cleaning and maintenance.

This will ensure that children do not play with the charger.

#### → Charge only lithium-ion batteries of the POWER FOR ALL system type PBA 18V with a capacity of 1.5 Ah or more (5 battery cells or more). The battery voltage must match the battery charging voltage of the charger. Do not charge any non rechargeable batteries.

Otherwise there is a risk of fire and explosion.



#### Do not expose the charger to rain or wet conditions.

Water entering a power tool will increase the risk of electric shock.

#### → Keep the charger clean. Dirt poses a risk of electric shock.

#### → Always check the charger, cable and plug before use. Stop using the charger if you discover any damage. Do not open the charger yourself, and have it repaired only by a qualified specialist using only original replacement parts.

Damaged chargers, cables and plugs increase the risk of electric shock.

#### → Do not operate the charger on an easily ignited surface (e.g. paper, textiles, etc.) or in a flammable environment.

There is a risk of fire due to the charger heating up during operation.

#### → In order to avoid safety hazards, if the power supply cord needs to be replaced, this must be done by FLYMO or by a customer service centre that is authorised to repair FLYMO power tools.

#### → Do not operate the product while it is charging.

**Products sold in GB only:** Your product is fitted with an BS 1363/A approved electric plug with internal fuse (ASTA approved to BS 1362). If the plug is not suitable for your socket outlets, it should be cut off and an appropriate plug fitted in its place by an authorised customer service agent. The replacement plug should have the same fuse rating as the original plug. The severed plug must be disposed of to avoid a possible shock hazard and should never be inserted into a mains socket elsewhere.

#### → These safety warnings apply only for 18V Li-ion rechargeable batteries for the POWER FOR ALL system.

#### → Use the rechargeable battery only with products from POWER FOR ALL System partners.

18V rechargeable batteries labelled with POWER FOR ALL are fully compatible with the following products: All 18 V products from POWER FOR ALL System partners.

#### → Observe the battery recommendations in the operating manual of your product. Only this way can the rechargeable battery and the product be operated without danger and the rechargeable batteries protected from hazardous overloading.

#### → Only charge the batteries using chargers recommended by the manufacturer or by POWER FOR ALL system partners.

A charger that is suitable for one type of battery pack may pose a fire risk when used with different batteries (Battery type: PBA 18V ... / compatible chargers: AL 18 ...).

#### → The battery is supplied partially charged.

To ensure full battery capacity, fully charge the battery in the charger before using your power tool for the first time.

#### → Keep battery packs out of the reach of children.

#### → Do not open the battery. There is a risk of short-circuiting.

#### → In case of damage and improper use of the battery, vapours may be emitted. The battery can set alight or explode.

Ensure the area is well ventilated and seek medical attention should you experience any adverse effects. The vapours may irritate the respiratory system.

#### → If used incorrectly or if the battery is damaged, flammable liquid may be ejected from the battery. Contact with this liquid should be avoided. If contact accidentally occurs, rinse off with water. If the liquid comes into contact with your eyes, seek additional medical attention. Liquid ejected from the battery may cause irritation or burns.

#### → If the battery is damaged liquid can be ejected and cover nearby surfaces. Check affected parts.

Clean these parts or change them if necessary.

#### → Do not short-circuit the battery pack. When the battery pack is not in use, keep it away from other metal objects, like paper clips, coins, keys, nails, screws or other small metal objects, that can make a connection from one terminal to another.

Shorting the battery terminals together may cause burns or a fire.

#### → The battery contacts can be hot after use. Be careful of the hot contacts when remove the battery.

#### → The battery can be damaged by pointed objects such as nails or screwdrivers or by force applied externally.

An internal short circuit may occur, causing the battery to burn, smoke, explode or overheat.

#### → Never service damaged battery packs. Service of battery packs should only be performed by the manufacturer or authorised service providers.



#### Protect the battery against heat, e.g. against continuous intense sunlight, fire, dirt, water and moisture.

There is a risk of explosion and short-circuiting.



#### → Only operate and store the battery at an ambient temperature between -20 °C and +50 °C.

Do not leave the battery in your car in the summer, for example.

At temperatures of <0 °C some devices may experience a loss of power.

#### → Only charge the battery at an ambient temperature which is between 0 °C and +45 °C. Only charge the rechargeable battery with a USB cable at an ambient temperature which is between +10 °C and +35 °C.

Charging outside of this temperature range can increase the risk of damage to the battery and pose a fire hazard.

#### → After use, allow the battery to cool down for at least 30 minutes before charging or storing.

## Electrical safety



### DANGER! Cardiac arrest!

This product makes an electromagnetic field while it operates. This field may under some conditions interfere with active or passive medical implants. To decrease the risk of conditions that can possibly injure or kill, we recommend persons with medical implants to speak with their physician and the medical implant manufacturer before you operate the product.



### DANGER! Risk of explosion!

Do not operate the product in explosive atmospheres, such as in the presence of flammable liquids, gases or dust. Power tools create sparks which may ignite the dust or fumes.

When handling large quantities of dust-laden material, electrostatic charges can occur which can discharge suddenly under unfavourable (e.g. very dry) ambient conditions.

Only use the battery product between 0 °C bis 40 °C.

Do not use under wet conditions.

Protect the battery contacts from moisture.

## Personal safety



### DANGER! Risk of suffocation!

Small parts can be easily swallowed. There is also a risk that the poly-bag can suffocate toddlers. Keep toddlers away when you assemble the product.

Operate the product only in daylight or in good artificial light.

Walk, do not run.

Keep all nuts, bolts and screws tight to be sure the product is in safe working condition.

Avoid using the product in bad weather conditions especially when there is a risk of lightning.

Do not wear clothing that could be sucked in by the air intake opening (e.g. scarf, tie, jewellery).

Tie long hair together and secure hair (e.g. with helmet, cap, headscarf).

Warning: Do not use the product without the tubes properly attached to avoid flying debris contact which can cause serious injury.

Always wear gloves and use eye protection to prevent rocks or debris from being blown or ricocheting into the eyes and face which can result in blindness or serious injury.

Be careful during adjustment of the product to prevent entrapment of the fingers between moving and fixed parts of the product, while assembling the blower parts.

Do not use the product if any part is damaged or broken or if any of the screws are loose. Have it repaired by an authorised repairer.

Do not use blower near leaf or brush fires, fireplaces, barbecue pits, ashtrays, etc. Proper use of the blower will help avoid spreading fire.

Never place objects inside the blower tubes; always direct the blowing debris away from people, animals, glass, and solid objects such as trees, automobiles, walls, etc.

The force of air can cause rocks, dirt, or sticks to be thrown or to ricochet which can hurt people or animals, break glass, or cause other damage.

Never use for spreading chemicals, fertilisers, or any other substances. This will prevent the spreading of toxic materials.

To prevent dust irritation, the use of a dust mask is recommended.

If the product doesn't stop due to a malfunction immediately disconnect the battery and contact the FLYMO Service.

Do not walk backwards whilst operating with your product, you could trip. Risk of stumbling.

Warning! When wearing hearing protection, and due to the noise produced by the product, the operator may not notice persons approaching.

This product is intended for outdoor use only.

Stay alert, watch what you are doing and use common sense when operating a power tool.

Do not use a power tool while you are tired or under the influence of drugs, alcohol or medication. A moment of inattention while operating power tools may result in serious personal injury.

Do not disassemble the product further than the delivery status.

## 2. ASSEMBLY



**DANGER! Risk of physical injury!**  
Risk of injury if the product starts accidentally and hair, clothing or loose objects are sucked in.

→ Wait for the rotor blades to stop and remove the battery before you assemble the product.

### To assemble the blower tube [Fig. A1]:

1. Push the blower tube ② onto the blower tube outlet ① until it stops and then turn the blower tube ② clockwise until it stops (bayonet lock).
2. Optional for blowing in corners you can put the nozzle ③ on the blower tube ① until it engages.

## 3. OPERATION



**DANGER! Risk of physical injury!**  
Risk of injury if the product starts accidentally and hair, clothing or loose objects are sucked in.

→ Wait for the rotor blades to stop and remove the battery before you adjust or transport the product.

### To charge the battery [Fig. O1/O2/O3]:



**CAUTION!**

→ Note the mains voltage! The voltage of the power source must match the voltage specified on the rating plate of the charger.

**For the FLYMO Battery Blower Art. 9706382-01 there is no battery and no charger in the scope of delivery.**

Thanks to the intelligent charging process, the charge condition of the battery is automatically detected and then charged up with the optimal charge current depending on battery temperature and voltage.

In this way, the battery is treated with care and remains permanently fully charged when it is stored in the charger.

1. Push the locking button ① and remove the battery ② from the battery holder ③.
2. Connect the battery charger ④ into a mains socket.
3. Slide the battery charger ④ onto the battery ②.

**When the battery charge indicator ⑤ at the charger flashes green the battery is being charged.**

**When the battery charge indicator ⑤ at the charger illuminates permanently green the battery is completely charged** (Charging time, see 7. TECHNICAL DATA).

4. Examine the charge status regularly while you charge.
5. When the battery ② is completely charged, you can disconnect the battery ② from the charger ④.

### Meaning of the indication elements:

#### Indication on the charger [Fig. O3]:

**Flashing of the battery charge indicator ⑤** The charging procedure is indicated by flashing of the battery charge indicator ⑤.



**Note:** The charging procedure is only possible when the battery temperature is within the allowable charging temperature range, see 7. TECHNICAL DATA.

**Continuous lighting of the battery charge indicator ⑤**



**Continuous lighting** of the battery charge indicator ⑤ indicates that the battery is fully charged or that the temperature of the battery is not within the allowable charging temperature range and can therefore not be charged.

When the battery is not inserted, **continuous lighting** of the battery charge indicator ⑤ indicates that the mains plug is inserted in the socket outlet and that the battery charger is ready for operation.

**Battery charge status indication ⑥ on the product [Fig. O4/O6]:**  
**After starting the product, the battery charge status indication ⑥ is displayed for 5 seconds.**

Battery charge status	Battery charge status indication
67 – 100 % charged	⑥, ⑦ and ⑧ illuminate green
34 – 66 % charged	⑥ and ⑦ illuminate green
11 – 33 % charged	⑥ illuminates green
0 – 10 % charged	⑥ flashes green

**If the LED ⑥ flashes green, the battery must be charged.**

If the error LED ⑨ is illuminated or flashing, see 6. TROUBLESHOOTING.

### Work position [Fig. O5]:

Move at work away from solid objects such as kerbstones/walks, large stones, vehicles and fences.

Clean corners by starting in corners and moving outward. This will prevent an accumulation of debris that could be blown into your face.

Be careful when you work near plants. The force of the air flow could damage tender plants.

### To start the blower [Fig. O1/O6]:



**DANGER! Risk of physical injury!**  
Risk of injury if the product does not stop when you release the start lever.

→ Do not bypass the safety devices or switches. For example do not attach the start lever to the handle.

### To start:

1. Put the battery ② into the battery holder ③ until it audibly engages.
2. Pull the start lever ④.  
*The blower starts and the battery charge status indication ⑥ is displayed for 5 seconds.*

### To stop:

1. Release the start lever ④.  
*The blower stops.*
2. Push the locking button ① and remove the battery ② from the battery holder ③.

### To adjust the airflow [Fig. O6]:

You can adjust the air flow in 7 steps.

→ Scroll the power wheel ⑦ to the desired airflow.

- Low airflow:** Ideal for blowing light leaves, e.g. on pebbles.  
**Medium airflow:** Ideal for normal foliage.  
**Large airflow:** Ideal for large and wet foliage.

## 4. MAINTENANCE



**DANGER! Risk of physical injury!**  
Risk of injury if the product starts accidentally and hair, clothing or loose objects are sucked in.

→ Wait for the rotor blades to stop and remove the battery before you maintain the product.

### To clean the blower [Fig. M1]:



**DANGER! Risk of physical injury!**  
Risk of injury and risk of damage to the product.

- Do not clean the product with water or with a water jet (in particular high-pressure water jet).  
→ Do not clean with chemicals including petrol or solvents. Some can destroy critical plastic parts.

### The airflow slots must always be clean.

1. Clean the airflow slots ⑤ with a soft brush (do not use a screwdriver).
2. Remove the blower tube and clean it.

### To clean the battery and the battery charger:

Make sure that the surface and the contacts of the battery and the battery charger always are clean and dry before you connect the battery charger.

### Do not use running water.

- **Battery charger:** Clean the contacts and the plastic parts with a soft and dry cloth.  
→ **Battery:** Occasionally clean the ventilation slots and the terminals on the battery using a soft brush that is clean and dry.

## 5. STORAGE

### To put into storage:

**The product must be stored away from children.**

1. Remove the battery.
2. Charge the battery.
3. Clean the blower, the battery and the battery charger (see 4. MAINTENANCE).
4. Store the blower, the battery and the battery charger in a dry, enclosed and frost-free place.

**Disposal:**

(in accordance with Directive 2012/19/EU/S.I. 2013 No. 3113)



The product must not be disposed of to normal household waste. It must be disposed of in line with local environmental regulations.

**IMPORTANT!**

→ Dispose of the product through or via your municipal recycling collection centre.

**Disposal of the battery:**



The battery contains lithium-ion cells that should not be disposed of with normal household waste at the end of its life.

**Li-ion**

**IMPORTANT!**

→ Dispose of the batteries through or via your municipal recycling collection centre.

1. Discharge the lithium-ion cells completely (Contact the FLYMO Service).
2. Protect the contacts on the lithium-ion cells against short circuits.
3. Dispose of the lithium-ion cells properly.

## 6. TROUBLESHOOTING



**DANGER! Risk of physical injury!**

Risk of injury if the product starts accidentally and hair, clothing or loose objects are sucked in.

→ Wait for the rotor blades to stop and remove the battery before you troubleshoot the product.

Problem	Possible Cause	Remedy
<b>Blower vibrates abnormally</b>	Mechanical failure.	→ Contact the FLYMO Service.
<b>Blower does not start or stops.</b> <b>LED (L) is flashing green [Fig. 04]</b>	Battery is empty.	→ Charge the battery.
<b>Blower does not start or stops.</b> <b>Error-LED (M) is illuminated red [Fig. 04]</b>	Battery temperature is outside the permissible temperature range.	→ Wait until the battery temperature is between 0 °C – + 45 °C again.
	There are drops of water or moisture between the battery contacts on the blower.	→ Remove the water drops/ moisture with a dry cloth.
	Engine is blocked.	→ Remove the obstacle. Start again.
	Battery was connected while holding down the start lever.	→ Release the start lever and start again.
<b>Blower does not start or stops.</b> <b>Error-LED (M) is flashing red [Fig. 04]</b>	Start lever is out of order.	→ Contact the FLYMO Service.
	Product is defective.	→ Contact the FLYMO Service.
	<b>Blower does not start or stops.</b> <b>Error-LED (M) is not illuminated [Fig. 04]</b>	Battery is not put completely into the battery holder.
<b>Charging is not possible.</b> <b>Battery charge indicator (C) is continuously illuminated [Fig. 03]</b>	Battery is defective.	→ Replace the battery.
	Product is defective.	→ Contact the FLYMO Service.
	The battery is not connected (correctly).	→ Connect the battery to charger correctly.
	Battery contacts are dirty.	→ Clean the battery contacts (e.g. by connecting and disconnecting the battery several times. Replace the battery if necessary.
<b>Charging is not possible.</b> <b>Battery charge indicator (C) is continuously illuminated [Fig. 03]</b>	Battery temperature is outside the permissible charging temperature range.	→ Wait until the battery temperature is between 0 °C – + 45 °C again.
	Battery is defective.	→ Replace the battery.

Problem	Possible Cause	Remedy
<b>Battery charge indicator (C) is not illuminated [Fig. 03]</b>	Mains plug of the charger is not (correctly) plugged in.	→ Insert the mains plug into the mains socket (completely).
	Socket outlet, mains cable or charger is defective.	→ Check the mains voltage. Let the charger be checked if necessary by an authorised specialist dealer or the FLYMO Service.

**NOTE:**

Repairs must only be done by Husqvarna UK Ltd. service departments or specialist dealers approved by FLYMO.

→ For any other malfunctions please contact the Husqvarna UK Ltd. Customer Service.

## 7. TECHNICAL DATA

Battery Blower	Unit	Value (PNC 9706382-01 / 9706383-01)
<b>Flow rate</b>	m <sup>3</sup> /min.	7.9
<b>Max. blow speed</b>	km/h	100
<b>Weight (without battery)</b>	kg	1.8
<b>Sound pressure level L<sub>pa</sub><sup>1)</sup></b> <b>Uncertainty k<sub>pa</sub></b>	dB (A)	85 2.5
<b>Sound power level L<sub>wa</sub><sup>2)</sup>;</b> <b>measured/ guaranteed</b> <b>Uncertainty k<sub>wa</sub></b>	dB (A)	95 / 96 1
<b>Hand/ arm vibration a<sub>vhw</sub><sup>1)</sup></b> <b>Uncertainty k<sub>vhw</sub></b>	m/s <sup>2</sup>	0.4 1.5

Measuring process complying with: <sup>1)</sup> EN 50636-2-100 <sup>2)</sup> RL 2000/14/EC/S.I. 2001 No. 1701



**NOTE:** The stated vibration emission value has been measured according to a standardised test procedure and can be used for comparison of one electric power tool with another. It can also be used for preliminary evaluation of exposure. The vibration emission value can vary during actual use of the electric power tool depending on the ways in which the machine is used. As a safety measure, you should work with the machine for a maximum of 1 hour without interruption.

System Battery	Unit	Value (PNC 5313825-01) PBA 18V 2.0Ah W-B	Value (PNC 5313826-01) PBA 18V 2.5Ah W-B
<b>Battery voltage</b>	V (DC)	18	18
<b>Battery capacity</b>	Ah	2.0	2.5
<b>Number of cells (Li-Ion)</b>		5	5

Appropriate POWER FOR ALL system Battery Chargers: AL 1810 CV / AL 1815 CV / AL 18V-20 / AL 1830 CV / AL 1880 CV.

Battery Charger AL 1810 CV P4A	Unit	Value (PNC 5313822-01)
<b>Mains voltage</b>	V (AC)	220 – 240
<b>Mains frequency</b>	Hz	50 – 60
<b>Rated power</b>	W	26
<b>Battery charging voltage</b>	V (DC)	18
<b>Max. battery-charging current</b>	mA	1000
<b>Battery charging time 80% / 97 – 100% (approx.)</b>		
<b>PBA 18V 2.0Ah W-B</b>	min.	96 / 124
<b>PBA 18V 2.5Ah W-B</b>	min.	120 / 154
<b>PBA 18V 4.0Ah W-C</b>	min.	192 / 244
<b>Permitted charging temperature range</b>	°C	0 – 45
<b>Weight according to EPTA-Procedure 01:2014</b>	kg	0.17
<b>Protection class</b>		□ / II

Appropriate POWER FOR ALL system Batteries: PBA 18V.

## 8. ACCESSORIES

<b>FLYMO System Battery</b> P4A PBA 18V/45 P4A PBA 18V/72	Battery for additional duration or for replacement.	<b>PNC 5313826-01</b> <b>PNC 5313827-01</b>
---	---	--

## 9. SERVICE/WARRANTY

---

### **Service:**

Please contact the address on the back page.

### **Warranty statement:**

In the event of a warranty claim, no charge is levied to you for the services provided.

Husqvarna UK Ltd. grants a warranty for all original FLYMO new products for two years from the date of original purchase from the retailer, provided that the devices have been for private use only. This manufacturer's warranty does not apply to products acquired second hand. This warranty includes all significant defects of the product that can be proved to be material or manufacturing faults. This warranty is fulfilled by supplying a fully functional replacement product or by repairing the faulty product sent to us free of charge; we reserve the right to choose between these options. This service is subject to the following provisions:

- The product has been used for its intended purpose as per the recommendations in the operating instructions.
- Neither the purchaser nor a third party has attempted to open or repair the product.
- Only Original FLYMO replacement parts and wear parts have been used for operation.
- Presentation of the receipt.

Normal wear and tear of parts and components (such as blades, blade fixing parts, turbines, light bulbs, V-belts/toothed belts, impellers, air filters, spark plugs), visual changes, wear parts and consumables are excluded from the warranty.

This manufacturer's warranty is limited to replacement and repair of products in accordance with the abovementioned conditions. The manufacturer's warranty does not constitute an entitlement to lodge other claims against us as a manufacturer, such as for damages. This manufacturer's warranty does **not**, of course, affect statutory and contractual warranty claims against the dealer/retailer.

The manufacturer's warranty is governed by the law of the Federal Republic of Germany.

In case of a warranty claim, please return the faulty product, together with a copy of the receipt and a description of the fault, with postage paid to the service address.

### **Consumables:**

The blower tube and the nozzle are consumables and are not included in the warranty.

## PRODUCT LIABILITY

---

In accordance with the German Product Liability Act, we hereby expressly declare that we accept no liability for damage incurred from our products where said products have not been properly repaired by a FLYMO-approved service partner or where original FLYMO parts or parts authorised by FLYMO were not used.

## EC DECLARATION OF CONFORMITY

---

The undersigned hereby certifies as the authorised representative of the manufacturer, Husqvarna AB, 561 82 Huskvarna, Sweden, that, when leaving our factory, the unit(s) indicated below is/are in accordance with the harmonised EU guidelines, EU standards of safety and product specific standards. This certificate becomes void if the unit(s) is/are modified without our approval.

Description of the product:	<b>Battery Blower</b>	
Product type:	<b>18V EasiClear 100</b>	
Articlenumber:	<b>9706382-01 9706383-01</b>	
CE-Directives:	<b>2000/14/EC 2006/42/EC 2011/65/EU 2014/30/EU</b> Charger: <b>2014/35/EU</b>	
Harmonised EN:	<b>EN ISO 12100 EN 60335-1 EN 50636-2-100</b> Charger: <b>EN 60335-1 EN IEC 60335-2-29</b>	
Deposited documentation:	<b>GARDENA Technical Documentation, M. Jäger Hans-Lorensen-Str. 40 D-89079 Ulm</b>	
Conformity assessment according to:	<b>2000/14/EG: Art. 14 Annex V</b>	
Noise level: measured / guaranteed	<b>95 dB(A) / 96 dB(A)</b>	
Ulm, 01.10.2022 Authorised representative:	 <b>Reinhard Pompe</b> Vice President Products	 <b>Wolfgang Engelhardt</b> Vice President Supply Chain

## UKCA DECLARATION OF CONFORMITY

The manufacturer: Husqvarna AB SE 561 82 Huskvarna, Sweden hereby certifies, when leaving our factory, the unit(s) indicated below is/are in accordance with the UK Regulations, designated standards of safety and product specific designated standards. This certificate becomes void if the units are modified without our approval.

Description of the product:	<b>Battery Blower</b>	
Product type:	<b>18V EasiClear 100</b>	
Articlenumber:	<b>9706382-01 9706383-01</b>	
UK regulations:	<b>S.I. 2008/1597 S.I. 2016/1091 S.I. 2012/3032 S.I. 2001/1701</b> Charger: <b>2016/1101</b>	
Designated standards:	<b>EN ISO 12100 EN 60335-1 EN 50636-2-100</b> Charger: <b>EN 60335-1 EN IEC 60335-2-29</b>	
Conformity assessment body:	<b>Intertek Testing &amp; Certification Ltd. Academy Place, 1 – 9 Brook Street Brentwood, Essex CM14 5NQ United Kingdom</b>	
Conformity assessment procedure:	<b>According to S.I. 2001/1701 Art. 11 Schedule 8</b>	
UK Importer:	<b>Husqvarna UK Limited</b>	
Deposited documentation:	<b>Preston Road Aycliffe County Durham UK DL5 6UP</b>	
Noise level: measured / guaranteed	<b>95 dB(A) / 96 dB(A)</b>	
Ulm, 01.10.2022 Authorised Representative:	 <b>Reinhard Pompe</b> Vice President Products	 <b>Wolfgang Engelhardt</b> Vice President Supply Chain







**Great Britain**

Husqvarna UK Ltd  
Preston Road  
Aycliffe Industrial Park  
Newton Aycliffe  
County Durham  
DL5 6UP  
Phone:+44 (0) 344 8444558  
customer.services@husqvarna.co.uk



52100-85.960.01/0822  
Husqvarna AB  
Drottninggatan 2  
SE-561 82 Huskvarna  
Sweden

Our policy of continuous improvement means that the specification of products may be altered from time to time without prior notice.

Copyright © 2022 Flymo S.A. All rights reserved.

Flymo® and other product and feature names are registered or unregistered trademarks of Flymo S.A.