

WT 1030  
Art. 1825

**GB Operating Instructions**  
Water Timer electronic

**S Bruksanvisning**  
Bevatningstimer electronic

**NL Gebruiksaanwijzing**  
Elektronische watertimer

**D Gebrauchsanweisung**  
Bewässerungsuhr electronic

**FIN Käyttöohje**  
Elektroninen kasteluajastin

GB

S

NL

D

FIN

# GARDENA Water Timer electronic WT 1030

---

*Welcome to the Garden of GARDENA...*



Please read these operating instructions carefully and observe the notes given. Use these instructions to familiarise yourself with the Water Timer electronic and its proper use as well as the notes on safety.



For safety reasons, children and young people under 16 as well as anyone who is not familiar with these operating instructions may not use the Water Timer.

→ Please keep these operating instructions in a safe place.

## **Contents**

1. Where to Use Your GARDENA Water Timer .....	3
2. For Your Safety .....	3
3. Function .....	5
4. Putting Your Water Timer into Operation .....	6
5. Operating Your Water Timer .....	8
6. Trouble-Shooting .....	12
7. Putting Your Water Timer Out of Operation .....	13
8. Technical Data .....	13
9. Service .....	14

# 1. Where to Use Your GARDENA Water Timer

---

## *Intended use*

The GARDENA Water Timer is intended for private use in domestic and hobby gardens, exclusively for outdoor use, to control sprinklers and watering systems.

## *Please note*



**The GARDENA Water Timer must not be used for industrial purposes or in conjunction with chemicals, foodstuffs, easily flammable and explosive materials.**

# 2. For Your Safety

---

## *Use:*

### **Warning!**

→ **Only use the Water Timer outdoors.**

The water timer is not approved for indoor use.

The minimum operating pressure is 1 bar, the maximum operating pressure is 12 bar. The minimum flow rate is 20 l/h.

→ Check the filter in the sleeve nut regularly and clean if necessary.

→ Do not pull the hose connected to the Water Timer and avoid tensile strain.

**Battery:**

**For functional safety reasons, only use a 9 V alkali-manganese (alkaline) battery type IEC 6LR61.**

**The Water Timer will only run for approx. 1 year if the new alkaline battery has a nominal voltage of at least 9 V.**

→ Check the battery before you buy it.

**Putting your Water Timer into operation:**

To prevent water entering the battery compartment, the Water Timer must only be mounted in a perpendicular position with the sleeve nut pointing upwards.

After you have selected the watering program, the Water Timer opens at the selected starting time. To avoid getting wet when operating the Water Timer, connect the hose or turn off the tap before selecting the program. Alternatively, the control unit can be removed for programming.


**Water flow:**

The max. temperature for the water is 40 °C.

→ Only use clear fresh water.

### 3. Function

#### Control knob and OK button:

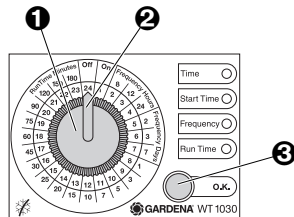

- 1** Control knob
- 2** Control knob pointer
- 3** OK button

#### Battery status display:

The GARDENA Water Timer electronic allows you to set different watering cycles for different watering times independent of whether you are using a sprinkler, a sprinkler system installation or drip-head watering system to irrigate your garden.


Your Water Timer electronic will water your garden completely automatically according to the program you choose. You can set the timer to water your garden early in the morning or late at night when water evaporates the least, or while you are away on holiday.

You simply program the time (to the nearest hour), watering starting time / duration and cycle by turning the pointer **2** of the control knob **1** to the correct time and pressing the OK button **3**.

The Water Timer opens at the starting time you have selected.

The 3 LEDs **Time**, **Start Time** and **Frequency** flash to indicate that the battery is flat.

→ Replace the battery  
(see 4. Operation “Inserting the Battery”).


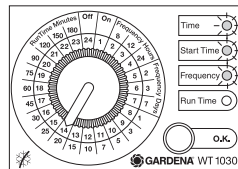


The functional safety of the water timer depends on the capability of the battery.


If you change the battery the program is not saved. You must reprogram the Water Timer (see 5. Operation).

## 4. Putting Your Water Timer into Operation

### Inserting the battery:

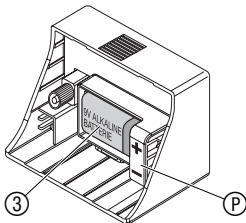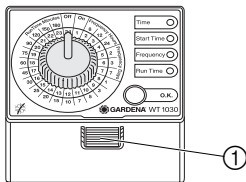

1. Press the release button ① and remove the control unit ② from the housing of the Water Timer.
2. Insert the battery ③ in the battery compartment.  
*Pay attention to the polarity P (+/- markings).*
3. Re-attach the control unit ② to the housing.

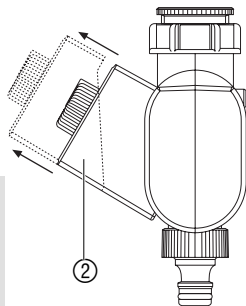


Make sure you exchange the battery at the right time to prevent the Water Timer failing due to a low battery when you are away for longer periods of time.

Make sure that the time the battery has been in operation and the time you are planning to be away does not add up to more than a year.

Even if the battery is almost empty, the Water Timer ensures that an open valve is always closed since less energy is required to close the valve than to open it.

### Connecting your Water Timer:

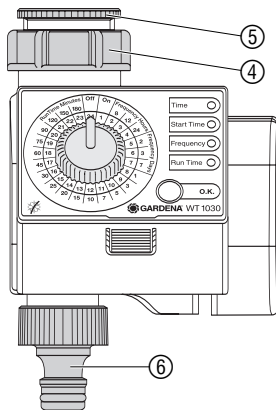

The Water Timer is fitted with a sleeve nut ④ for taps with a 33.3 mm (G1") thread. The adapter supplied ⑤ allows the Water Timer to be connected to taps with a 26.5 mm (G $\frac{3}{4}$ ") thread.


### Connecting the Water Timer to taps with a 33.3 mm (G1") thread:

1. Screw the sleeve nut ④ of the Water Timer onto the thread of the tap by hand (do not use pliers).
2. Screw the threaded tap connector ⑥ onto the Water Timer.

### Connecting the Water Timer to taps with a 26,5 mm (G $\frac{3}{4}$ ") thread:

1. Screw the adapter ⑤ onto the tap by hand (do not use pliers).
2. Screw the sleeve nut ④ of the Water Timer onto the thread of the adapter ⑤ by hand (do not use pliers).
3. Screw the threaded tap connector ⑥ onto the Water Timer.

### Installing the anti-theft protection (optional):

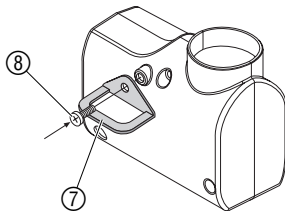

To protect your Water Timer against theft, the **GARDENA Anti-Theft Protection Art. No. 1815-00.791.00** is available from the GARDENA Service.


1. Fasten the bracket (7) to the back of the Water Timer using the screw (8).
2. The bracket can be used to attach a chain, for example.

The screw cannot be loosened once it has been screwed in.

## 5. Operation

### Setting the watering program:

The Water Timer control unit (2) can be removed. This allows you to set the watering program somewhere other than where the Water Timer is to be used.

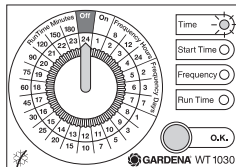

1.


The time of day and watering starting time are entered to the nearest hour.

1. Turn the control knob to **OFF** and confirm by pressing the **OK button**.

*The program stored in the memory is overwritten.*

*The Time LED flashes.*




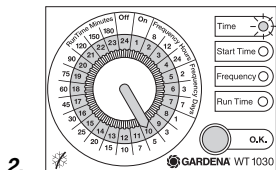

### Setting the time of day:

- Set the time on the **inner light-grey scale** by turning the control knob and confirm the time you have selected by pressing the **OK button** (e.g.: 10:00 am).


*The **Start Time** LED flashes.*

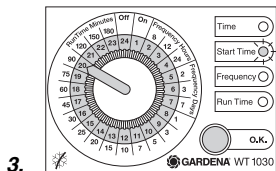

### Setting the watering starting time:

- Set the watering starting time on the **inner light-grey scale** by turning the control knob and confirm the time you have selected by pressing the **OK button** (e.g.: 20:00).

*The **Frequency** LED flashes.*

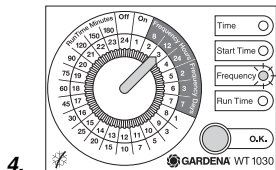


### Setting the Watering Cycle:

- Set the watering cycle on the **outer grey scale** (Frequency Hours / Days) using the control knob and confirm your selection by pressing the **OK button** (e.g.: 12 hour cycle).

*The **Run Time** LED flashes.*

5.

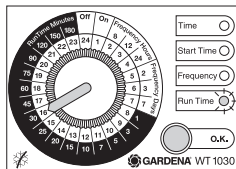


### Setting the Watering Time:

- Set the watering time on the **outer black scale** (Run Time Minutes) using the control knob and confirm your selection by pressing the **OK button** (e.g.: **30 minutes**).

*The program you have selected is now active.*

### Changing the watering time:

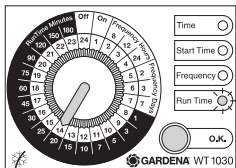


On hot or cooler days you can change the watering time before the program starts without having to re-enter the time of day, watering starting time or watering cycle.

- Select the changed watering time on the **outer black scale** (Run Time Minutes) by turning the control knob. (e.g.: **20 minutes**). *The Run Time LED flashes.*
- Confirm the watering time you have selected by pressing the **OK button**.

*The changed watering time is now active.*

### Manual watering (ON):

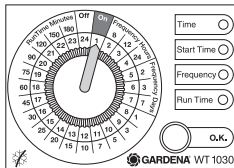

On especially hot days the programmed watering cycle is sometimes insufficient. You can then turn on your sprinkler or irrigation system manually.


The program you have set remains unchanged.

→ Turn the control knob to **ON**.

*The valve opens for 30 minutes independent of the set program.*

To activate the set program again, you must reset the watering time to the time originally set.

### Bad-weather function (OFF):

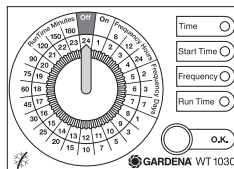

On rainy days the programmed watering cycle is often unnecessary. You can therefore stop the programmed watering cycle (bad-weather function).

The program you have set remains unchanged.

→ Turn the control knob to **OFF**.

*The valve closes and remains closed, independent of the watering cycle you have set.*

To reactivate the set program, you must first reset the watering time.

## 6. Trouble-Shooting

<b>Fault</b>	<b>Possible cause</b>	<b>Remedy</b>
<b>Not able to open the Water Timer manually using "ON/OFF".</b>	Battery capacity too low (3 LEDs flash).	→ Insert a new alkaline battery.
	Tap turned off.	→ Turn on tap.
<b>Watering not initiated.</b>	Control knob turned to "Frequency" or "ON/OFF".	→ Turn the control knob to "Run Time Minutes".
	Battery capacity too low (3 LEDs flash).	→ Insert a new alkaline battery.
	Data input/changes made while the program was starting or immediately before.	→ Input data or make changes before or after the starting times you have chosen.
	Tap turned off.	→ Turn on tap.
<b>Battery flat after working for a short time.</b>	The battery you inserted is not an alkaline battery.	→ Use an alkaline battery.

If you have any other problems with your Water Timer, please contact GARDENA Service.

## 7. Putting Your Water Timer Out of Operation

---

### **Disposing of flat batteries:**

→ Please return flat batteries to a GARDENA dealer or dispose of them properly at your nearest recycling centre.

Only dispose of batteries when they are flat.

### **Storage/Wintering:**

→ Store your Water Timer in a dry place away from frost before the first frost sets in.

### **Disposal:**

(in accordance with  
RL2002/96/EC)



The product must not be added to normal household waste. It must be disposed of properly.

## 8. Technical Data

---

<b>Min./max. operating pressure:</b>	1 bar / 12 bar
--------------------------------------	----------------

<b>Minimum flow rate:</b>	20 l/h
---------------------------	--------

<b>Flow medium:</b>	Clean fresh water
---------------------	-------------------

<b>Max. water temperature:</b>	40 °C
--------------------------------	-------

<b>Number of program-controlled watering cycles per day:</b>	Up to 3
--	---------

<b>Watering cycles per week:</b>	Every day, every 2nd, 3rd or 7th day
<b>Watering time per program:</b>	1, 3, 5, 7, 10, 15, 20, 25, 30, 45, 60, 75, 90, 120, 150 or 180 minutes
<b>Battery:</b>	1 x 9 V alkali-manganese (alkaline) type IEC 6LR61
<b>Running time:</b>	Approx. 1 year

## 9. Service

### *Warranty*

GARDENA guarantees this product for 2 years (from date of purchase). This guarantee covers all serious defects of the unit that can be proved to be material or manufacturing faults.

Under warranty we will either replace the unit or repair it free of charge if the following conditions apply:

- The unit must have been handled properly and in keeping with the requirements of the operating instructions.
- Neither the purchaser or a non-authorized third party have attempted to repair the unit.
- Faults which occur as a result of incorrectly installed or leaking batteries are not covered by the guarantee.

This manufacturer's guarantee does not affect the user's existing warranty claims against the dealer/seller.

If you have any problems with your Water Timer, please contact our Customer Service or return the defective unit together with a short description of the problem directly to one of the GARDENA Service Centres listed on the back of this leaflet.

**GB** *Product Liability*

We expressly point out that, in accordance with the product liability law, we are not liable for any damage caused by our units if it is due to improper repair or if parts exchanged are not original GARDENA parts or parts approved by us, and, if the repairs were not carried out by a GARDENA Service Centre or an authorised specialist. The same applies to spare parts and accessories.

**S** *Produktansvar*

Tillverkaren är inte ansvarig för skada som orsakats av produkten om skadan beror på att produkten har reparerats felaktigt eller om, vid reparation eller utbyte, andra än Original GARDENA reservdelar har använts. Samma sak gäller för kompletteringsdelar och tillbehör.

**NL** *Productaansprakelijkheid*

Wij wijzen er nadrukkelijk op, dat wij op grond van de wet aansprakelijkheid voor producten niet aansprakelijk zijn voor schade ontstaan door onze apparaten, indien deze door onvakkundige reparatie veroorzaakt zijn, of er bij het uitwisselen van onderdelen geen gebruik gemaakt werd van onze originele GARDENA onderdelen of door ons vrijgegeven onderdelen en de reparatie niet door de GARDENA technische dienst of de bevoegde vakman uitgevoerd werd. Ditzelfde geldt voor extra-onderdelen en accessoires.

**D** *Produkthaftung*

Wir weisen ausdrücklich darauf hin, dass wir nach dem Produkthaftungsgesetz nicht für durch unsere Geräte hervorgerufene Schäden einzustehen haben, sofern diese durch unsachgemäße Reparatur verursacht oder bei einem Teileaustausch nicht unsere Original GARDENA Teile oder von uns freigegebene Teile verwendet werden und die Reparatur nicht vom GARDENA Service oder dem autorisierten Fachmann durchgeführt wird. Entsprechendes gilt für Ergänzungsteile und Zubehör.



**FIN** **Product Liability**

Painotamme tuotevastuulain mukaisesti erityisesti sitä seikkaa, että emme vastaa elektroniselle vesiajastimelle aiheutuneista tai sen aiheuttamasta vahingoista, mikäli ne ovat aiheutuneet epäpätevän korjauksen takia, mikäli elektroniseen vesiajastimeen on vaihdettu osia, jotka eivät ole alkuperäisiä GARDENA-osia tai meidän hyväksymiä osia tai mikäli korjauksen on tehnyt jokin muu kuin GARDENA-huolto tai valtuutettu huolto. Sama koskee myös lisälaitteita ja -varusteita.

**GB** **EU Certificate of Conformity**

The undersigned GARDENA Manufacturing GmbH, Hans-Lorenser-Str. 40, D-89079 Ulm, hereby certifies that, when leaving our factory, the unit indicated below is in accordance with the harmonised EU guidelines, EU standards of safety and product specific standards. This certificate becomes void if the unit is modified without our approval.

**S** **EU Tillverkarintyg**

Undertecknad firma GARDENA Manufacturing GmbH, Hans-Lorenser-Str. 40, D-89079 Ulm, intygar härmed att nedan nämnda produkter överensstämmer med EU:s direktiv, EU:s säkerhetsstandard och produktspecifikation. Detta intyg upphör att gälla om produkten ändras utan vårt tillstånd.

**NL** **EU-overeenstemmingsverklaring**

Ondergetekende GARDENA Manufacturing GmbH, Hans-Lorenser-Str. 40, D-89079 Ulm, bevestigt, dat het volgende genoemde apparaat in de door ons in de handel gebrachte uitvoering voldoet aan de eis van, en in overeenstemming is met de EU-richtlijnen, de EU-veiligheidsstandaard en de voor het product specifieke standaard. Bij een niet met ons afgestemde verandering aan het apparaat verliest deze verklaring haar geldigheid.

**D** **EU-Konformitätserklärung Maschinenverordnung (9. GSGVO) / EMVG / Niedersp. RL**

Der Unterzeichnete GARDENA Manufacturing GmbH, Hans-Lorenser-Str. 40, D-89079 Ulm, bestätigt, dass das nachfolgend bezeichnete Gerät in der von uns in Verkehr gebrachten Ausführung die Anforderungen der harmonisierten EU-Richtlinien, EU-Sicherheitsstandards und produktspezifischen Standards erfüllt. Bei einer nicht mit uns abgestimmten Änderung des Gerätes verliert diese Erklärung ihre Gültigkeit.

**FIN EU-Vakuustodistus**

Allekirjoittanut, GARDENA Manufacturing GmbH, Hans-Lorenser-Str. 40, D-89079 Ulm, vahvistaa, että lähtiessään tehtaalta ko. tuote (tuotteet) on valmistettu EU-ohjeiden, EU-turvallisuus – ja tuote-erittelystandardien mukaisesti. Tämä vakuus mitätöityy, mikäli tuotetta (tuotteita) muutetaan ilman hyväksyntäämme.

Description of the unit:	Water Timer electronic	Type:	Art. No.:
Produktbeskrivning:	Bevattningstimer electronic	Type:	Art.nr. :
Omschrijving van het apparaat:	Elektronische watertimer	Typ: WT 1030	Art. nr.: 1825
Bezeichnung des Gerätes:	Bewässerungsuhr electronic	Typ:	Art.-Nr.:
EU-direktiivit:	Elektroninen kasteluajastin	Tyyppi:	art.-nro

EU directives:		Year of CE marking:	
EU direktiv:	89/336/EC	CE-Märkningsår:	
EU-richtlijnen:		Installatiejaar van de CE-aanduiding:	2001
EU-Richtlijnen:	93/68/EC	Anbringungsjaar der CE-Kennzeichnung:	
EU-direktiivit:		CE-hyväksyntä vuosi:	



Thomas Heint

Ulm, 20.07.2001	Technical Dept. Manager
Ulm, 2001.07.20.	Technical Director
Ulm, 20-07-2001	Hoofd technische dienst
Ulm, 20.07.2001	Technische Leitung
Ulm, 20.07.2001	Tekn. osaston päällikkö

**Deutschland / Germany**

GARDENA  
Manufacturing GmbH  
Service Center  
Hans-Lorenser-Straße 40  
D-89079 Ulm  
Produktfragen:  
(+49) 731 490-123  
Reparaturen:  
(+49) 731 490-290  
service@gardena.com

**Argentina**

Argensem® S.A.  
Calle Colonia Japonesa s/n  
(1625) Loma Verde  
Escobar, Buenos Aires  
Phone: (+54) 34 88 49 40 40  
info@argensem.com.ar

**Australia**

Nylex Consumer Products  
50-70 Stanley Drive  
Somerton, Victoria, 3062  
Phone: (+61) 1800 658 276  
spare.parts@nylex.com.au

**Austria / Österreich**

GARDENA  
Österreich Ges.m.b.H.  
Stettnerweg 11-15  
2100 Korneuburg  
Tel.: (+43) 22 62 7 45 45 36  
kundendienst@gardena.at

**Belgium**

GARDENA Belgium NV/SA  
Sterrebeekstraat 163  
1930 Zaventem  
Phone: (+32) 2 720 92 12  
Mail: info@gardena.be

**Brazil**

Palash Comércio e  
Importação Ltda.  
Rua América Brasileira,  
2414 - Chácara Sto Antonio  
São Paulo - SP - Brasil -  
CEP 04715-005  
Phone: (+55) 11 5181-0909  
eduardo@palash.com.br

**Bulgaria**

DENEX LTD.  
2 Luis Ahalier Str. - 7th floor  
Sofia 1404  
Phone: (+359) 2 958 18 21  
office@denex-bg.com

**Canada**

GARDENA Canada Ltd.  
100 Summerlea Road  
Brampton, Ontario L6T 4X3  
Phone: (+1) 905 792 93 30  
info@gardenacanada.com

**Chile**

Antonio Martinic y Cia Ltda.  
Cassillas 272  
Centro de Cassillas  
Santiago de Chile  
Phone: (+56) 2 20 10 708  
garfar\_cl@yahoo.com

**Costa Rica**

Compania Exim  
Euroberoamericana S.A.  
Los Colegios, Moravia,  
200 metros al Sur del Colegio  
Saint Francis - San José  
Phone: (+506) 297 68 83  
exim\_euro@racsa.co.cr

**Croatia**

KLIS d.o.o.  
Stanciceva 79, 10419 Vukovina  
Phone: (+385) 1 622 777 0  
gardena@klis-trgovina.hr

**Cyprus**

FARMOKIPIKI LTD  
P.O. Box 7098  
74, Digeni Akrita Ave.  
1641 Nicosia  
Phone: (+357) 22 75 47 62  
condam@spidernet.com.cy

**Czech Republic**

GARDENA spol. s r.o.  
Řípská 20 a, č.p. 1153  
627 00 Brno  
Phone: (+420) 800 100 425  
gardena@gardenabrno.cz

**Denmark**

GARDENA Norden AB  
Salgsafdeling Danmark  
Box 9003, S-200 39 Malmö  
info@gardena.dk

**Finland**

Habitec Oy  
Martinkyläntie 52  
01720 Vantaa

**France**

GARDENA  
PARIS NORD 2  
69, rue de la Belle Etoile  
BP 57080  
ROISSY EN FRANCE  
95948 ROISSY CDG CEDEX  
Tél. (+33) 0826 101 455  
service.consommateurs@  
gardena.fr

**Great Britain**

GARDENA UK Ltd.  
27-28 Brenkley Way  
Blezard Business Park  
Seaton Burn  
Newcastle upon Tyne  
NE13 6DS  
info@gardena.co.uk

**Greece**

Agrokip  
Psomadopoulos S.A.  
Ifaistou 33A  
Industrial Area Koropi  
194 00 Athens Greece  
V.A.T. EL093474846  
Phone: (+30) 210 66 20 225  
service@agrokip.gr  
www.agrokip.gr

**Hungary**

GARDENA  
Magyarország Kft.  
Késmárk utca 22  
1158 Budapest  
Phone: (+36) 80 20 40 33  
gardena@gardena.hu

**Iceland**

Ó. Johnson & Kaaber  
Tunguhalsi 1  
110 Reykjavik  
ooj@ojk.is

**Ireland**

Michael McLoughlin & Sons  
Hardware Limited  
Long Mile Road  
Dublin 12

**Italy**

GARDENA Italia S.p.A.  
Via Donizetti 22  
20020 Lainate (Mi)  
Phone: (+39) 02.93.94.79.1  
info@gardenaitalia.it

**Japan**

KAKUICHI Co. Ltd.  
Sumitomo Realty &  
Development Kojimachi  
BLDG., 8F, 5-1 Nibanncyo,  
Chiyoda-ku, Tokyo 102-0084  
Phone: (+81) 33 264 4721  
m\_ishihara@kaku-ichi.co.jp

**Luxembourg**

Magasins Jules Neuberg  
39, rue Jacques Stas  
Luxembourg-Gasperich 2549  
Case Postale No. 12  
Luxembourg 2010  
Phone: (+352) 40 14 01  
api@neuberg.lu

**Netherlands**

GARDENA Nederland B.V.  
Postbus 50176  
1305 AD ALMERE  
Phone: (+31) 36 521 00 00  
info@gardena.nl

**Neth. Antilles**

Jonka Enterprises N.V.  
Sta. Rosa Weg 196  
P.O. Box 8200, Curaçao  
Phone: (+599) 9 767 66 55  
pgm@jonka.com

**New Zealand**

NYLEX New Zealand Limited  
Building 2, 118 Savill Drive  
Mangere, Auckland  
Phone: (+64) 9 270 1806  
lena.chapman@nylex.com.au

**Norway**

GARDENA Norden AB  
Salgskontor Norge  
Karihaugveien 89  
1086 Oslo  
info@gardena.no

**Poland**

GARDENA Polska Sp. z o.o.  
Szymanów 9 d  
05-532 Baniocza  
Phone: (+48) 22 727 56 90  
gardena@gardena.pl

**Portugal**

GARDENA Portugal Lda.  
Recta da Granja do Marquês  
Edif. GARDENA Algueirão  
2725-596 Mem Martins  
Phone: (+351) 21 922 85 30  
info@gardena.pt

**Romania**

MADEX INTERNATIONAL SRL  
Soseaua Odaii 117-123,  
Sector 1,  
București, RO 013603  
Phone: (+40) 21 352 76 03  
madex@ines.ro

**Russia / Россия**

ООО ГАРДЕНА РУС  
123007, г. Москва  
Хорошевское шоссе, д. 32А  
Тел.: (+7) 495 647 25 10  
info@gardena-rus.ru

**Singapore**

Hy - Ray PRIVATE LIMITED  
40 Jalan Pemimpin  
#02-08 Tat Ann Building  
Singapore 577185  
Phone: (+65) 6253 2277  
hyray@singnet.com.sg

**Slovak Republic**

GARDENA Slovensko, s.r.o.  
Panónska cesta 17  
851 04 Bratislava  
Phone: (+421) 263 453 722  
info@gardena.sk

**Slovenia**

GARDENA d.o.o.  
Brodišče 15  
1236 Trzin  
Phone: (+386) 1 580 93 32  
servis@gardena.si

**South Africa**

GARDENA d.o.o.  
Brodišče 15  
1236 Trzin  
Phone: (+386) 1 580 93 32  
servis@gardena.si

**Spain**

GARDENA IBÉRICA S.L.U.  
C/ Basauri, nº 6  
La Florida  
28023 Madrid  
Phone: (+34) 91 708 05 00  
atencioncliente@gardena.es

**Sweden**

GARDENA Norden AB  
Försäljningskontor Sverige  
Box 9003  
200 39 Malmö  
info@gardena.se

**Switzerland / Schweiz**

GARDENA (Schweiz) AG  
Bitzberg 1  
8184 Bachenbülach  
Phone: (+41) 848 800 464  
info@gardena.ch

**Turkey**

GARDENA / Dost Diş Ticaret  
Mümesillik A.Ş. Sanayi  
Çad. Adil Sokak No. 1  
Kartal - İstanbul  
Phone: (+90) 216 38 93 939  
info@gardena-dost.com.tr

**Ukraine / Украина**

ALTSEST JSC  
4 Petropavlivska Street  
Petropavlivska, Borschahivka  
Town, Kyivo Svyatoshyh Region  
08130, Ukraine  
Phone: (+380) 44 459 57 03  
upyr@altsest.kiev.ua

**USA**

Melnor Inc.  
3085 Shawnee Drive  
Winchester, VA 22604  
Phone: (+1) 540 722-9080  
service\_us@melnor.com

1825-28.960.04/0307  
© GARDENA  
Manufacturing GmbH  
D-89070 Ulm  
http://www.gardena.com